



1	TXD	4G UART TXD
2	RXD	4G UART RXD
3	NET_STATUS	NET STATUS
4	PWRKEY	4G PWR N 低电平开机
5	RESET	4G RESET 低电平复位
6		
7		
8		
9		
10		
11		
12		
13		
14		
15		
16		
17		
18		
19		
20		